

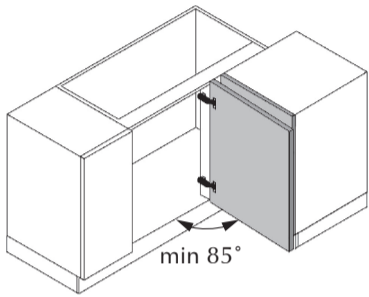


CABINET WITH VERTICAL WOODEN CROSS


CABINET WITHOUT VERTICAL WOODEN CROSS

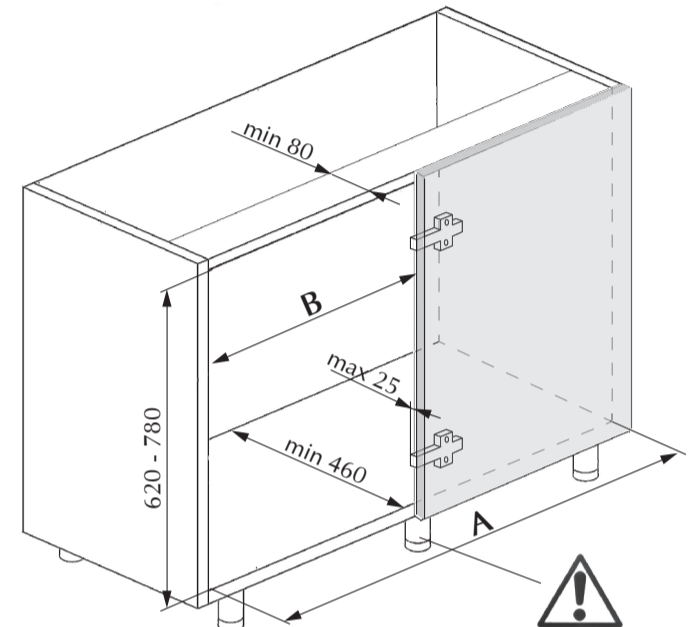

	A	B
MOD 400	min 760 mm	min 360 mm
MOD 450	min 860 mm	min 410 mm
MOD 500	min 960 mm	min 460 mm
MOD 600	min 960 mm	min 560 mm

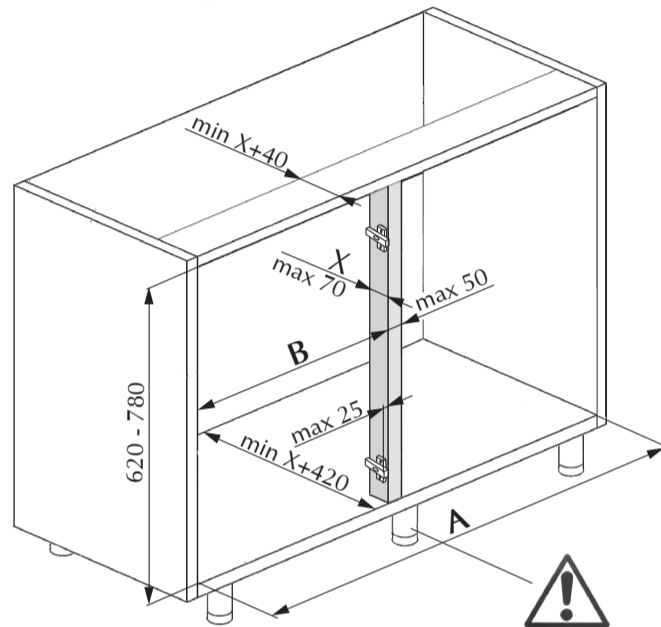


1 CABINET WITH VERTICAL WOODEN CROSS


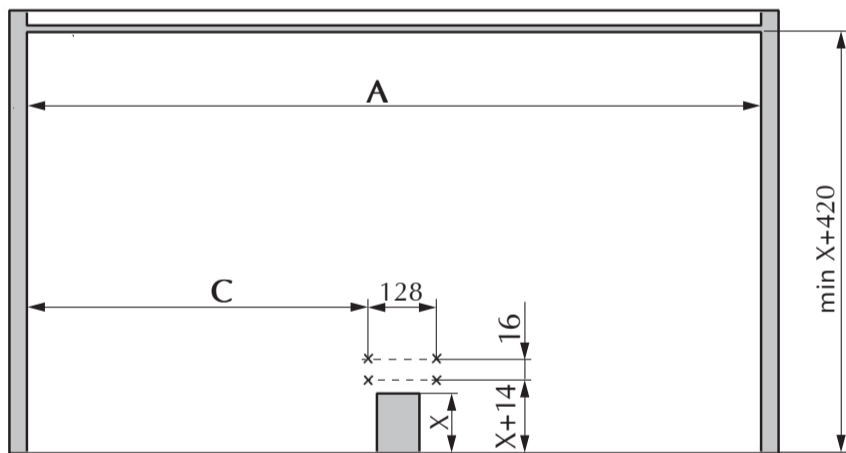


	A	C
MOD 400	min 760 mm	326 mm
MOD 450	min 860 mm	376 mm
MOD 500	min 960 mm	426 mm
MOD 600	min 960 mm	526 mm


CABINET WITHOUT VERTICAL WOODEN CROSS

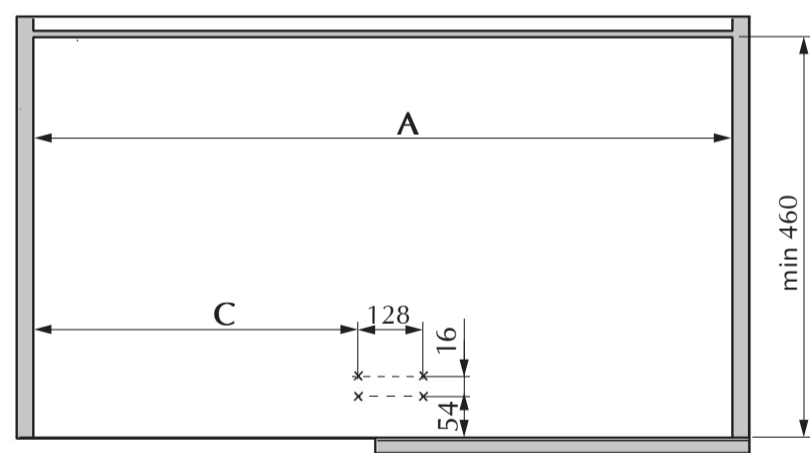








	A	C
MOD 400	min 760 mm	326 mm
MOD 450	min 860 mm	376 mm
MOD 500	min 960 mm	426 mm
MOD 600	min 960 mm	526 mm

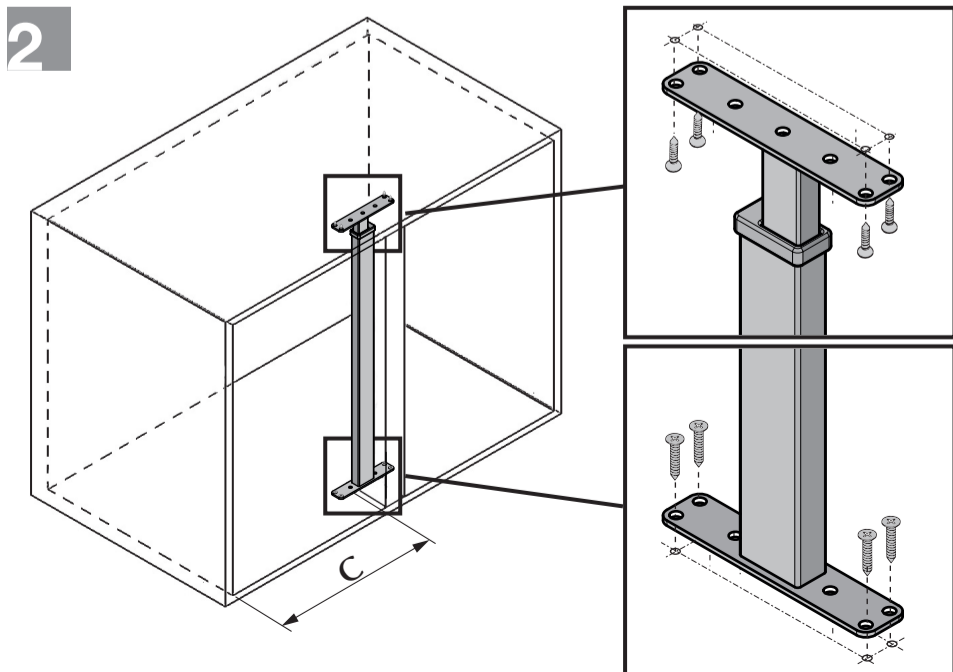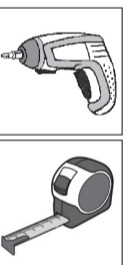



Screws not included.

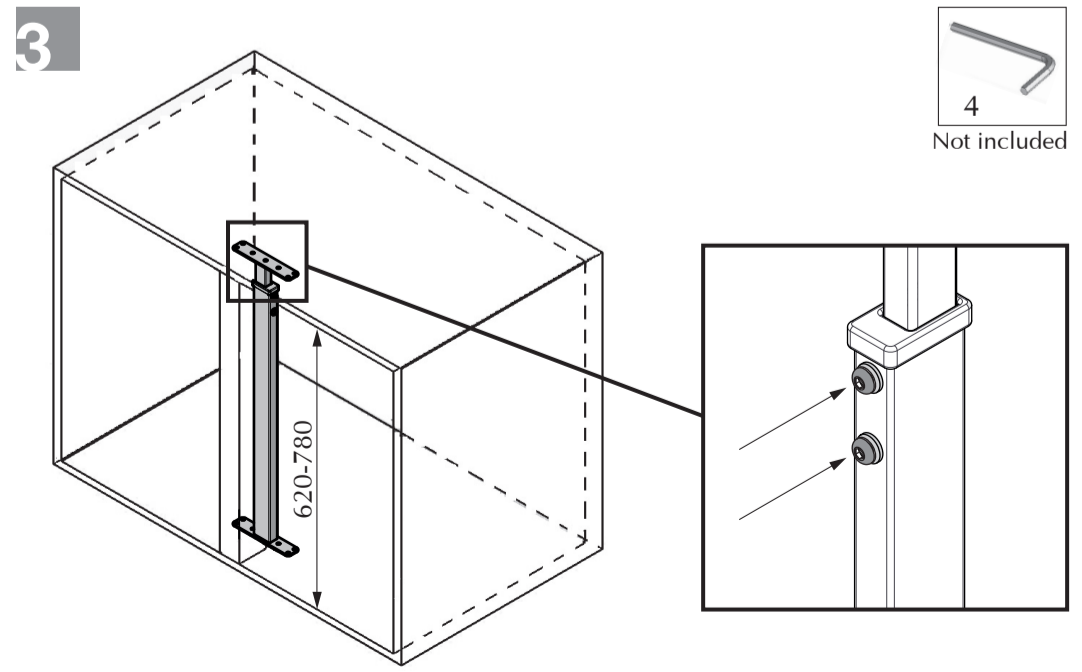




4

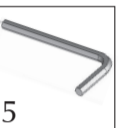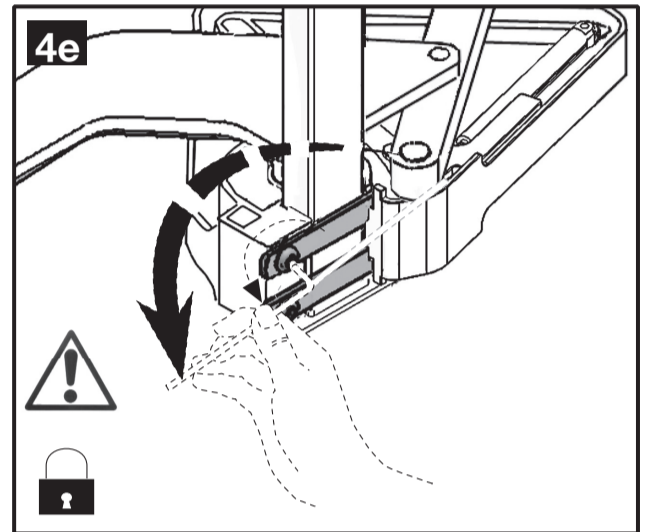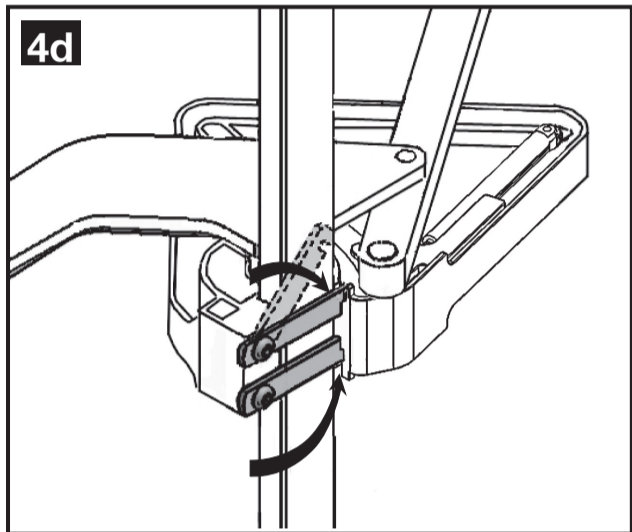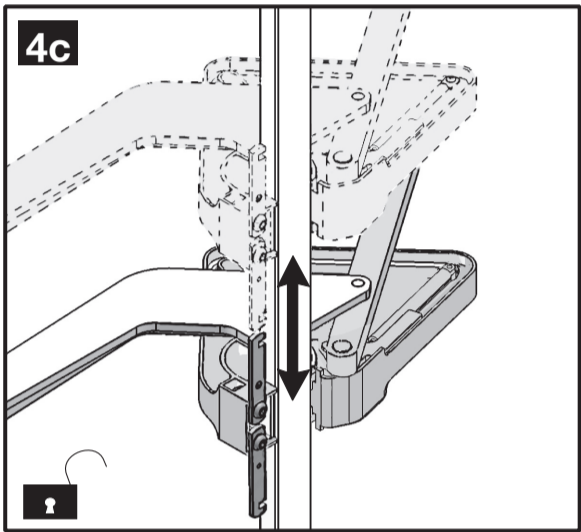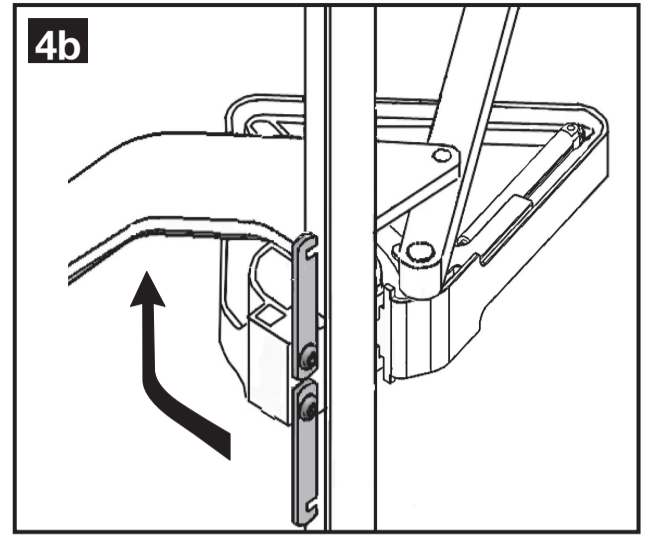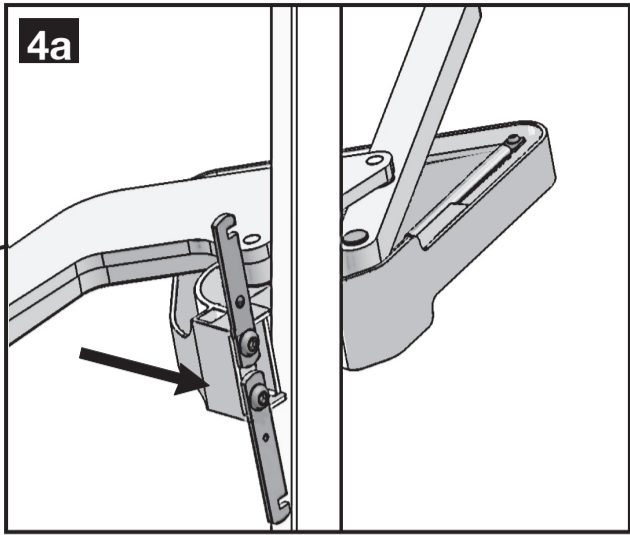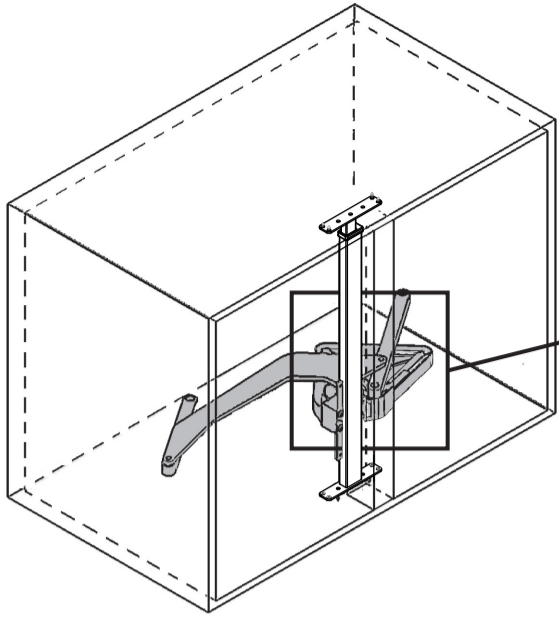

5

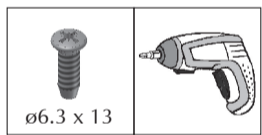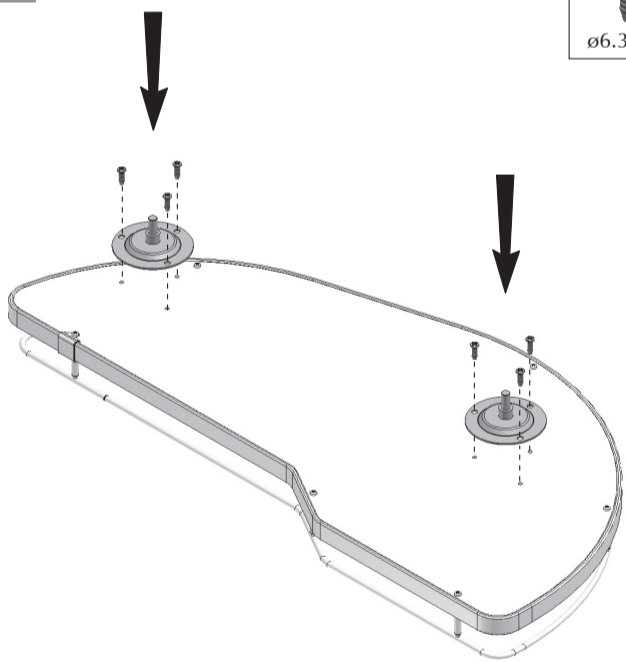

6

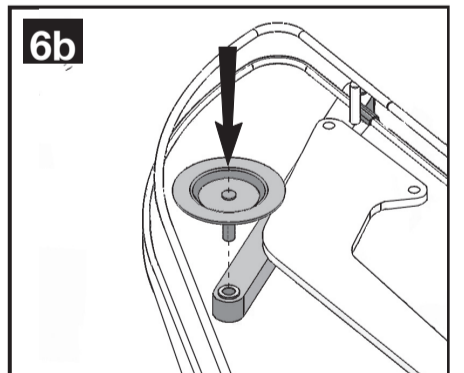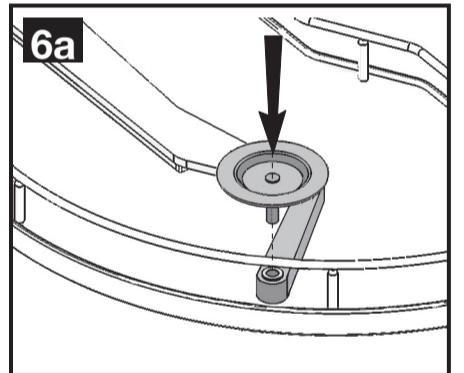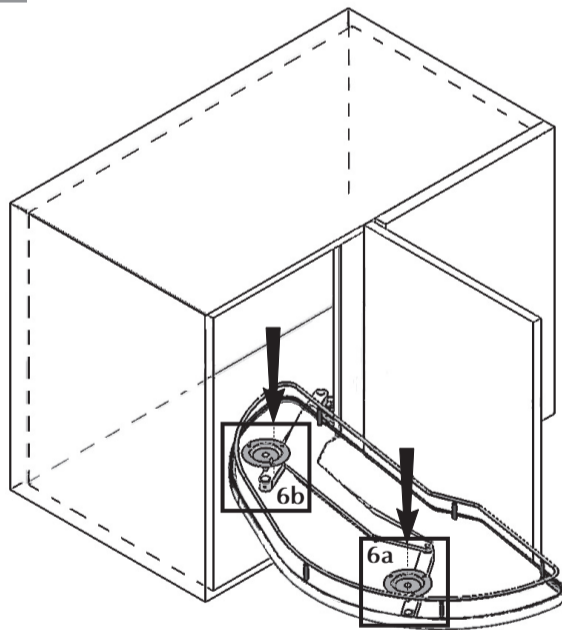

7

