

Art.-Nr. 200.1660.xx
200.1663.xx

OekoComplet

peka
macht Stauraum ergonomisch


Montageanleitung
Assembly instruction
Instruction de montage

Komplettsystem inklusive Führungssystem
Complete system including sliding system
Système complet avec coulisses

6295 Mosen
Switzerland
T +41 41 919 94 00
www.peka-system.ch


CH/EU 550/600

Bohrschablone
Drilling template
Cabarit de perçage




1x


950.0627.MA 550/600




2x




2x




1x



1x

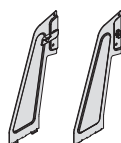

1x



1x



6x 4,5x20




6x



18x 4,5x15



4x 4,5x40

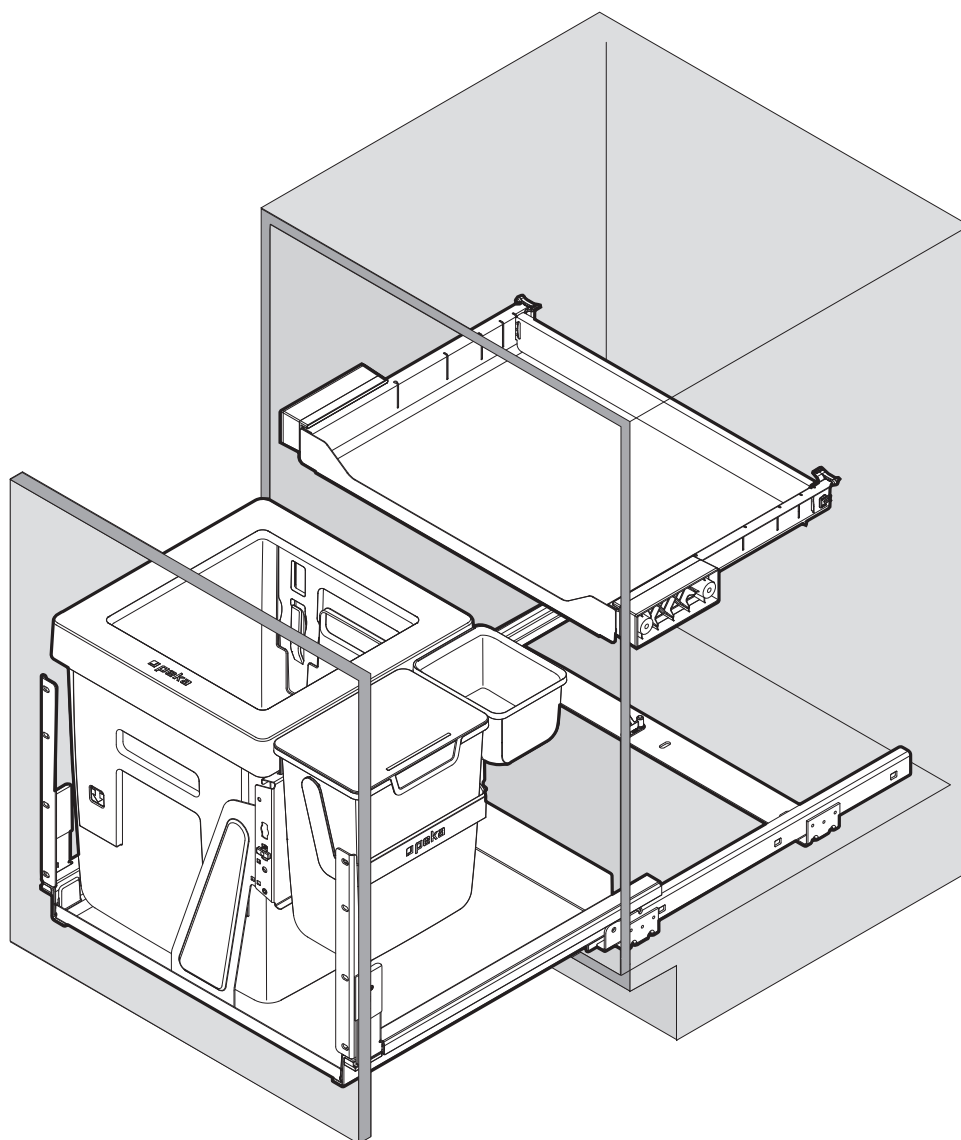

950.0623.MA

Rev. a

16.11.2015


28.04.2017 som

1/4

1

550/600

Bohrschablone
Drilling template
Cabarit de perçage



1x

950.0627.MA 550/600




6x






6x 4,5x15




6x 4,5x20



2x

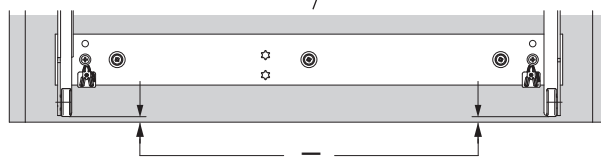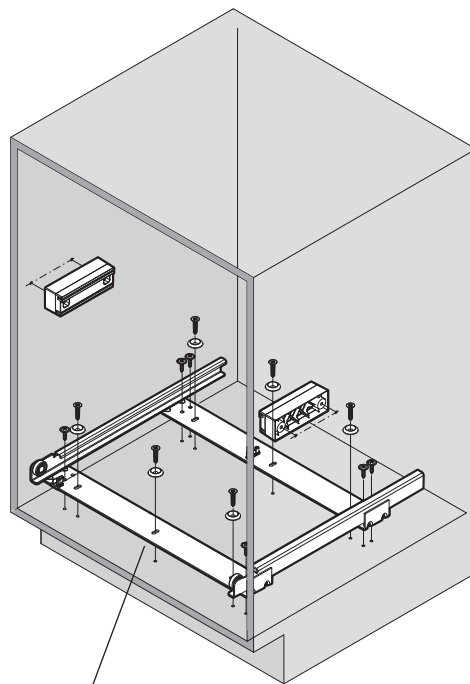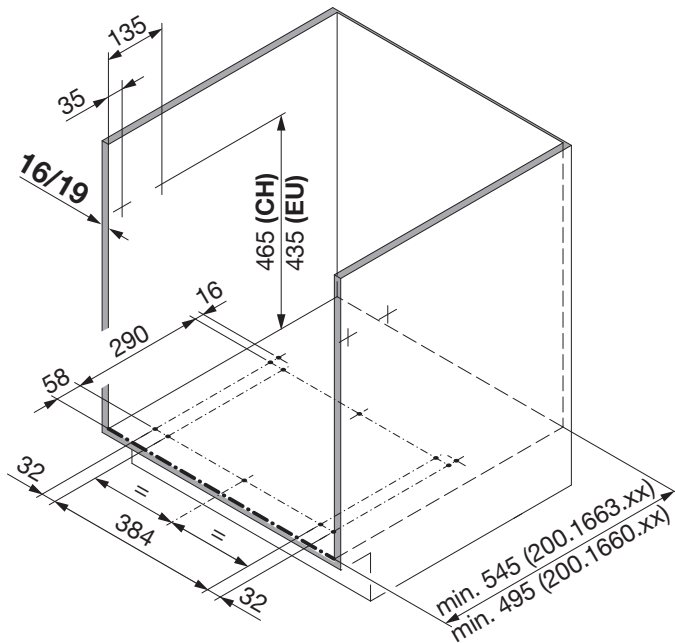


550

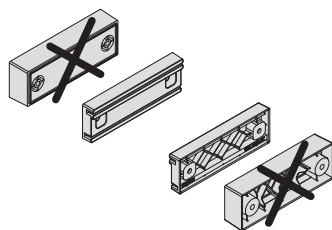

4x 4,5x15

	16mm		19mm	
	CH	EU	CH	EU
CH = 465				
EU = 435				






600

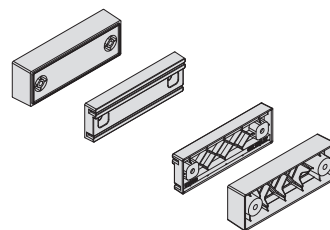

4x 4,5x40


	16mm		19mm	
	CH	EU	CH	EU
CH = 465				
EU = 435				

2

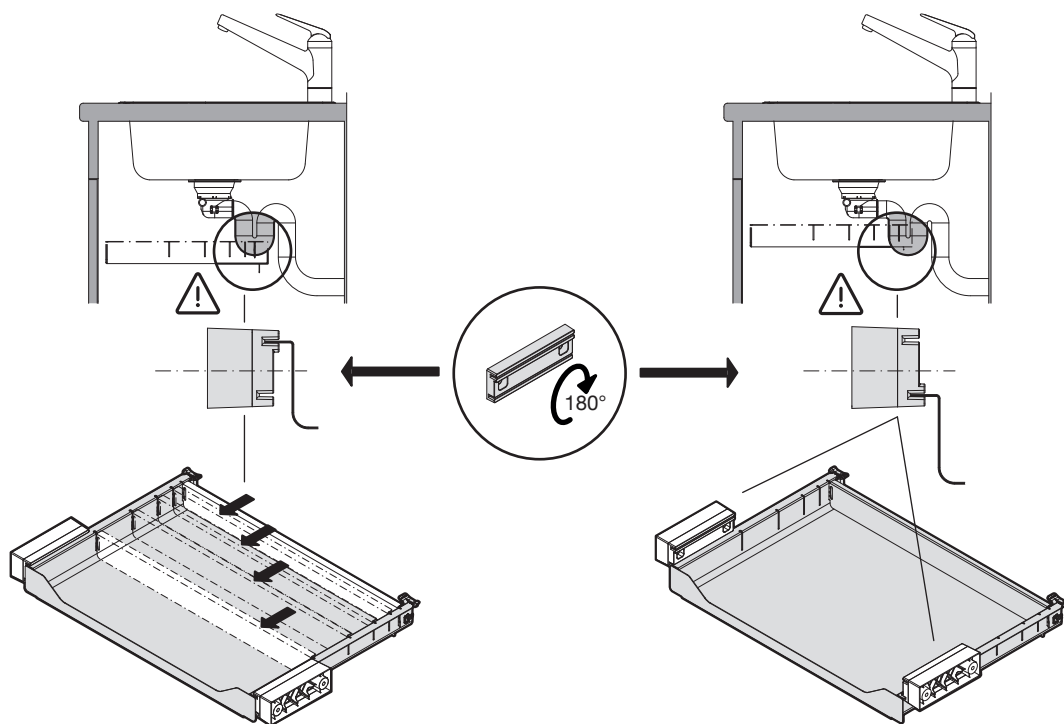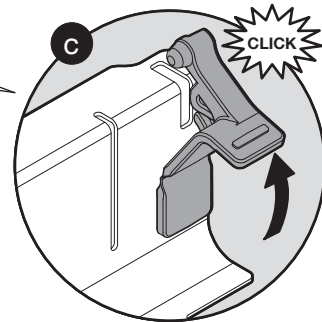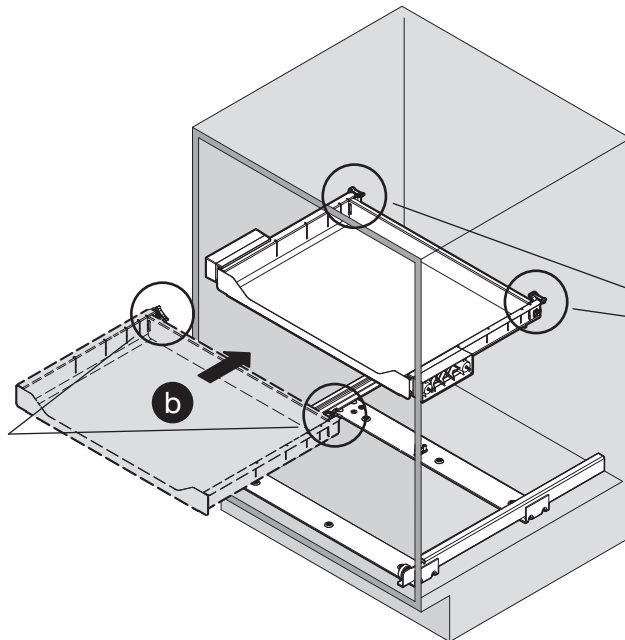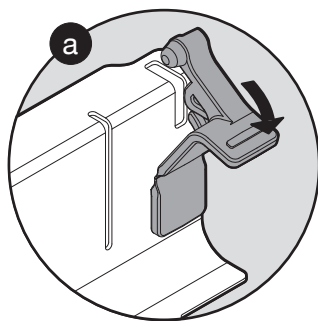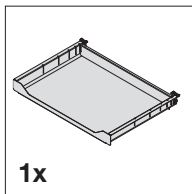

3





Bohrschablone
Drilling template
Cabarit de perçage



950.0627.MA 550/600






8x 4,5x15

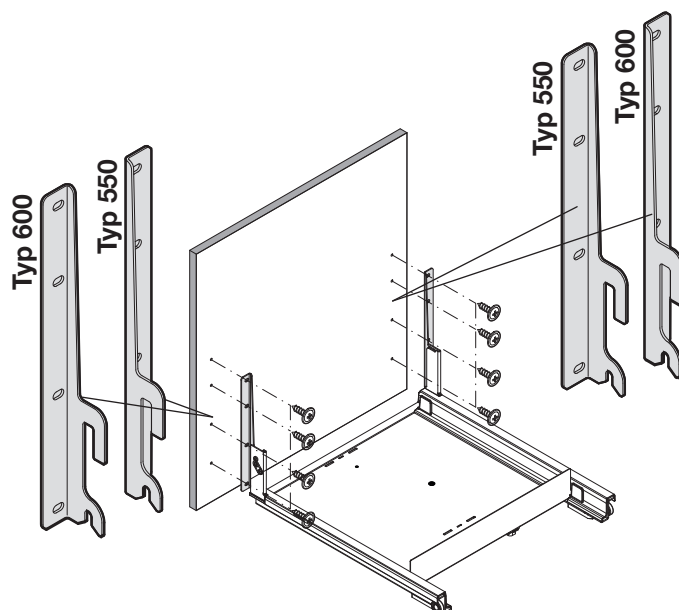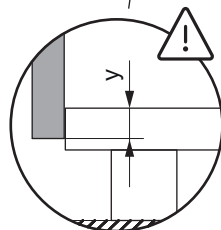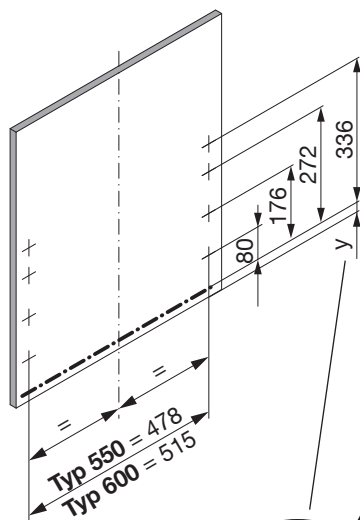


950.0623.MA	Rev. a
16.11.2015	28.04.2017 som
3/4	


4

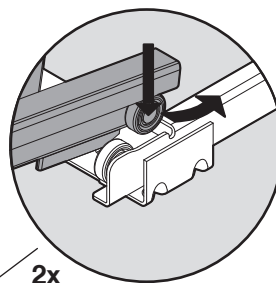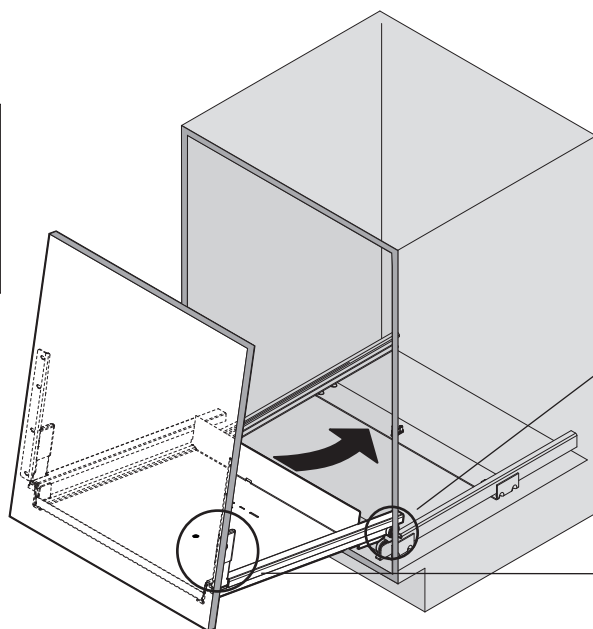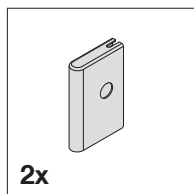








5

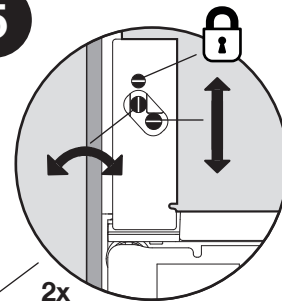




6

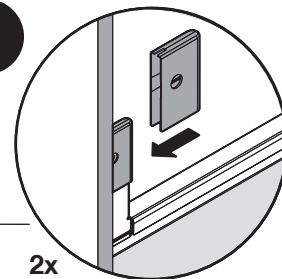

7

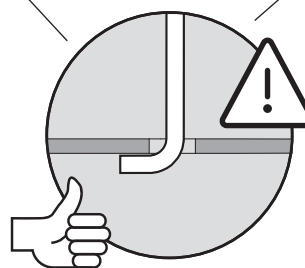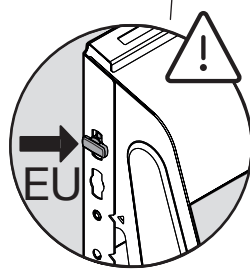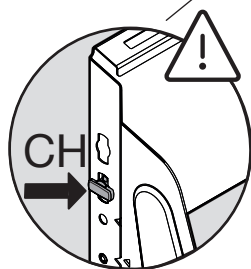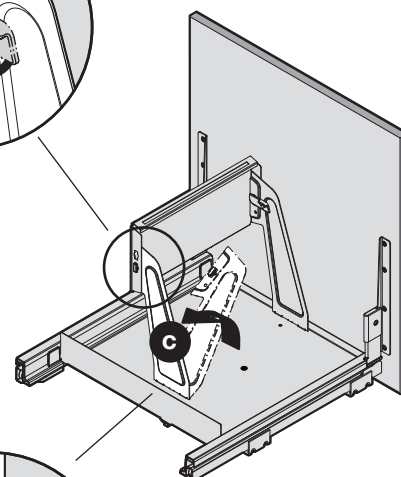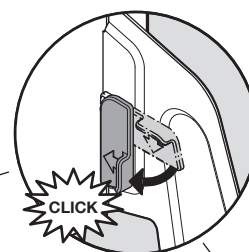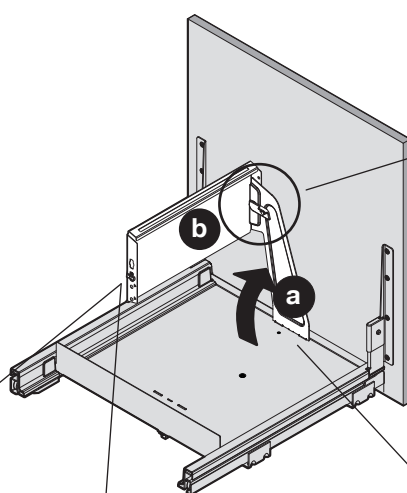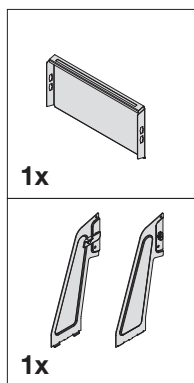

8

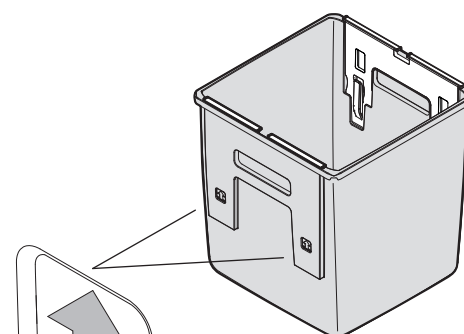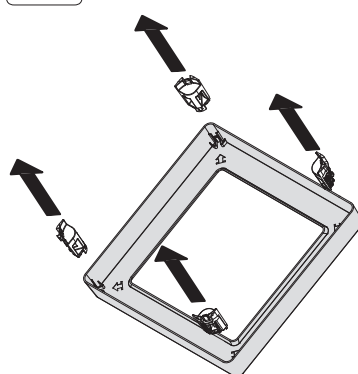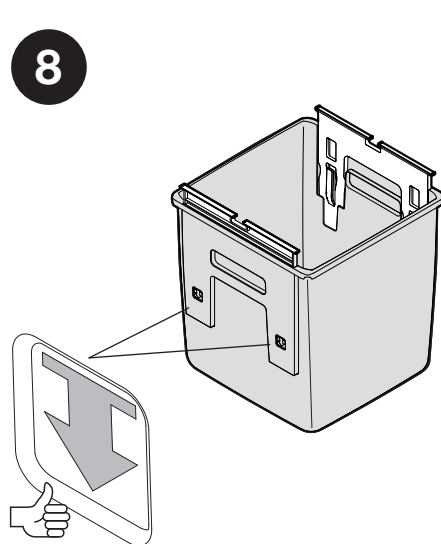

950.0623.MA	Rev. a
16.11.2015	28.04.2017 som
4/4	