

Art.-Nr. 200.1661.xx
200.1662.xx
200.1664.xx
200.1665.xx

OekoComplet




Montageanleitung
Assembly instruction
Instruction de montage


Komplettsystem inklusive Führungssystem
Complete system including sliding system
Système complet avec coulisses

6295 Mosen
Switzerland
T +41 41 919 94 00
www.peka-system.ch


CH/EU 450/500

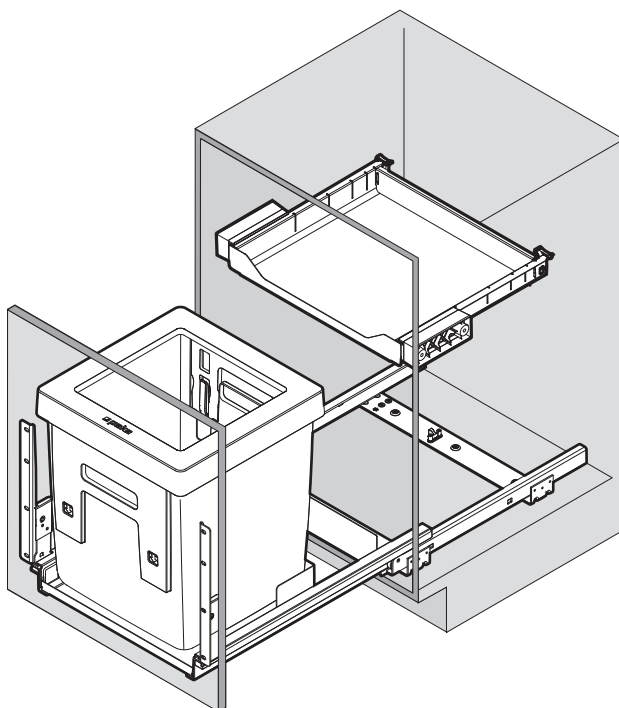

EU 450/500

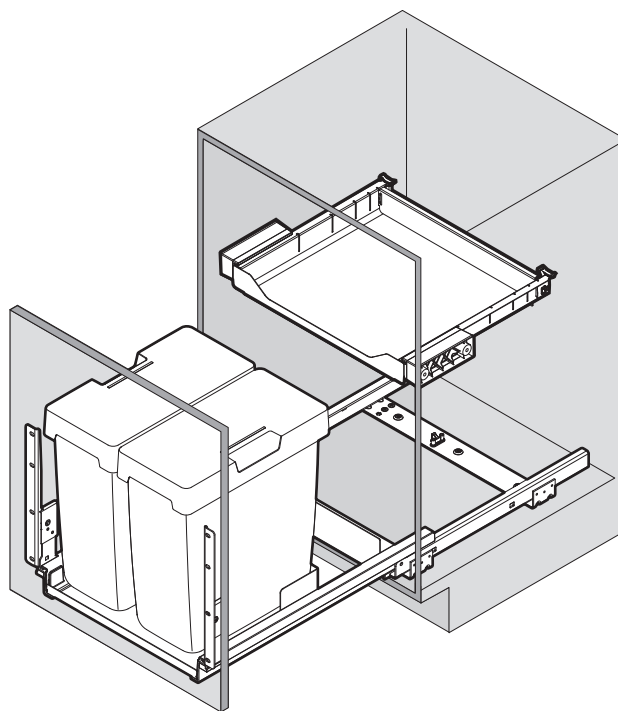


Bohrschablone
Drilling template
Cabarit de perçage




1x


950.0627.MA 550/600




2x



2x



1x



1x



6x 4,5x20



6x



18x 4,5x15




4x 4,5x40

950.0624.MA	Rev. a
16.11.2015 hrm	28.04.2017 som
1/4	

1

450/500

Bohrschablone
Drilling template
Cabarit de perçage



1x

950.0627.MA 550/600




6x






6x 4,5x15



6x 4,5x20




2x

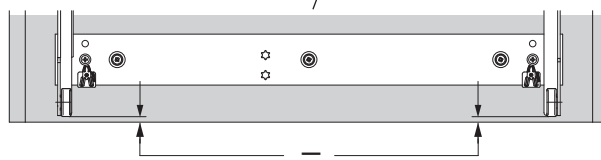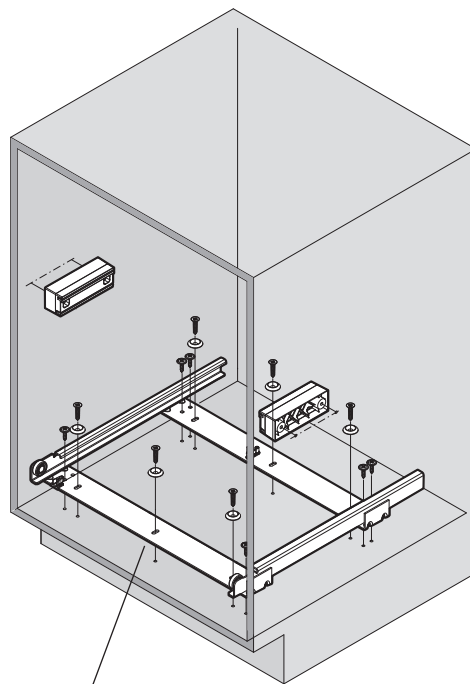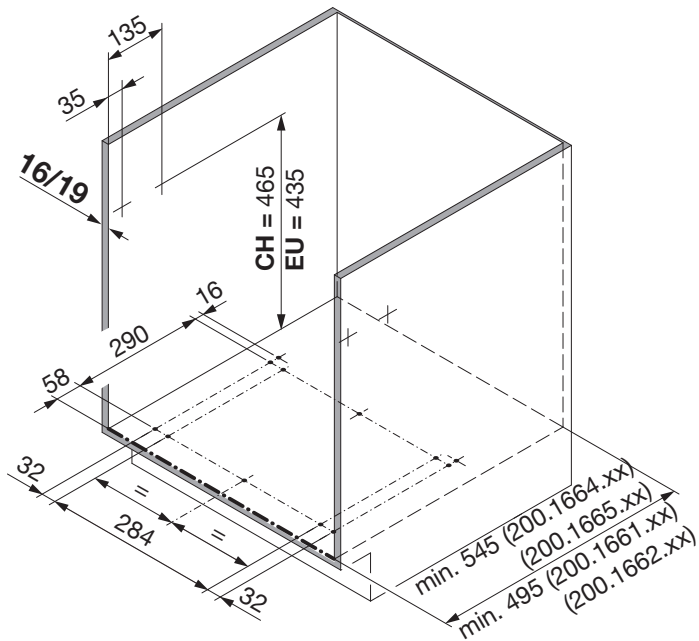

450



4x 4,5x15

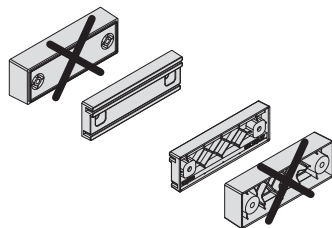

CH = 465


EU = 435

16mm		19mm	
CH	EU	CH	EU

500








4x 4,5x40

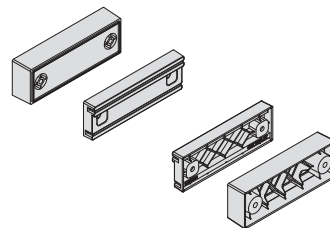


16mm		19mm	
CH	EU	CH	EU

2

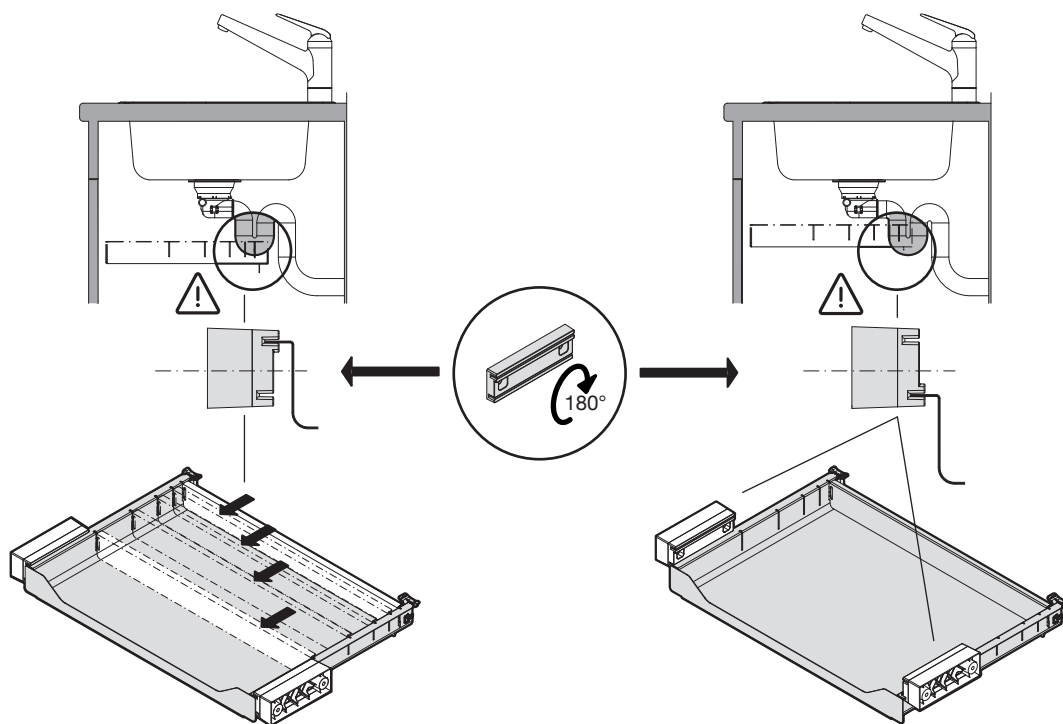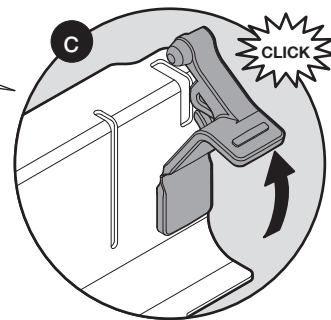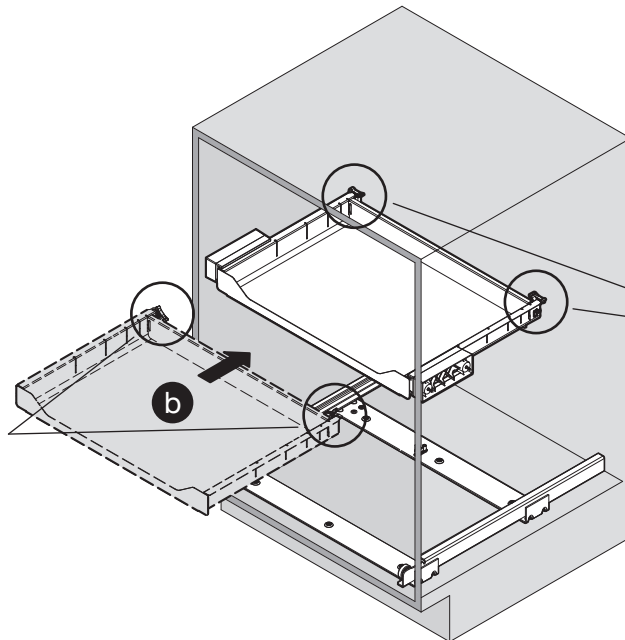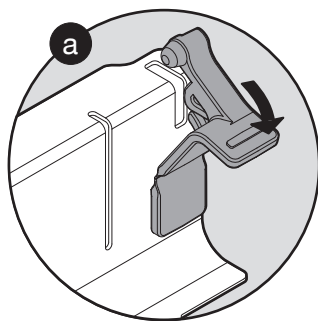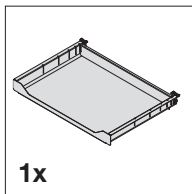

3





Bohrschablone
Drilling template
Cabarit de perçage



950.0627.MA 550/600




8x 4,5x15

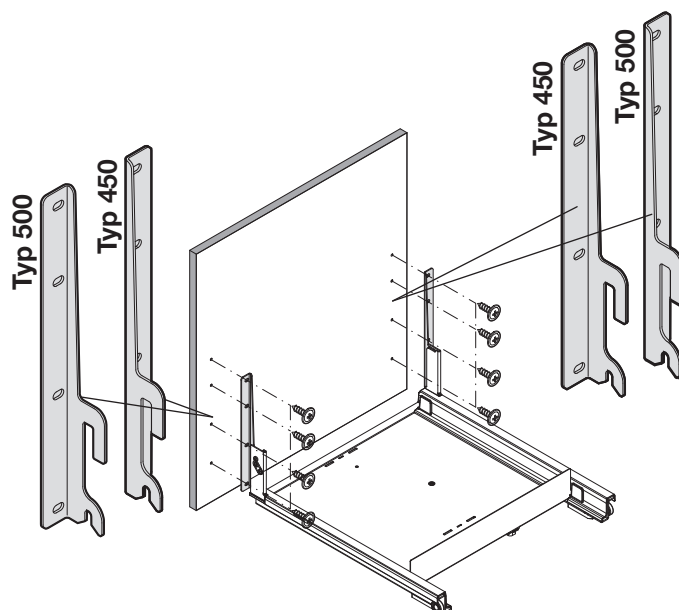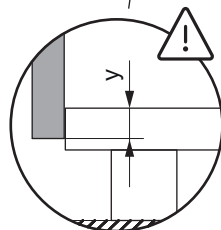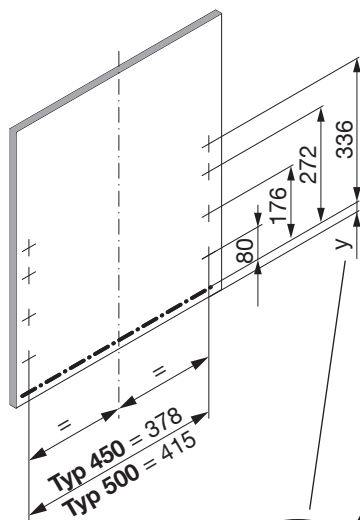


950.0624.MA	Rev. a
16.11.2015 hrm	28.04.2017 som
3/4	



4

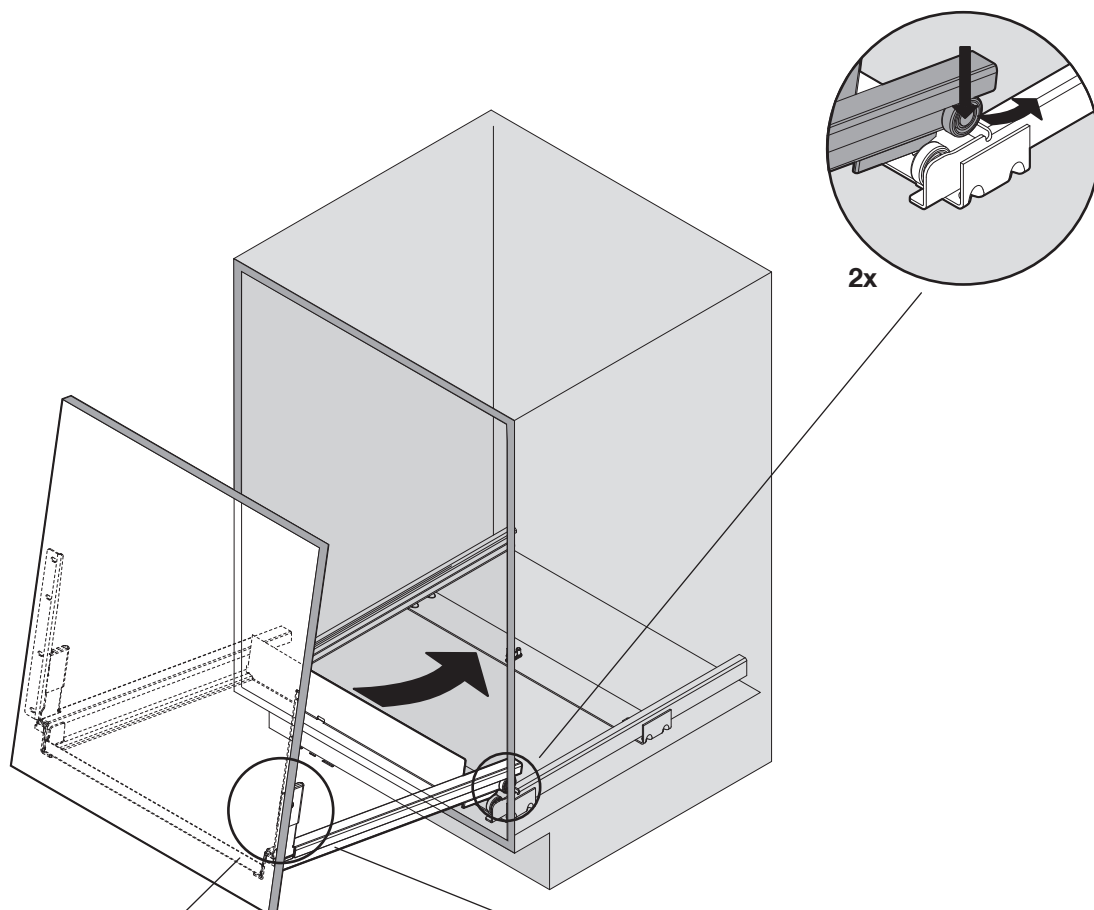

5

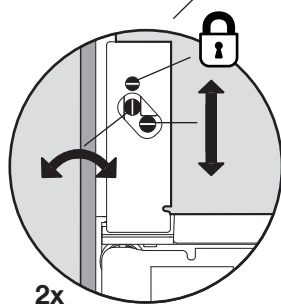

6

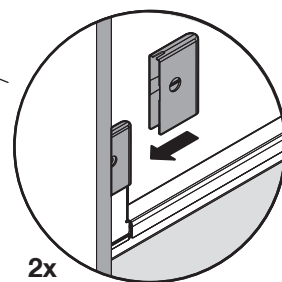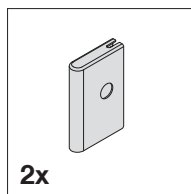

8

