

# ADJUSTMENT SHEET

## KUBICA K6200



### VERTICAL ADJUSTMENT




Untighten the blocking screw **A** in all the hinges on the door leaf



Rotate the screw **B** in all the hinges



Tighten the blocking screw **A** in all the hinges (max 4 Nm)

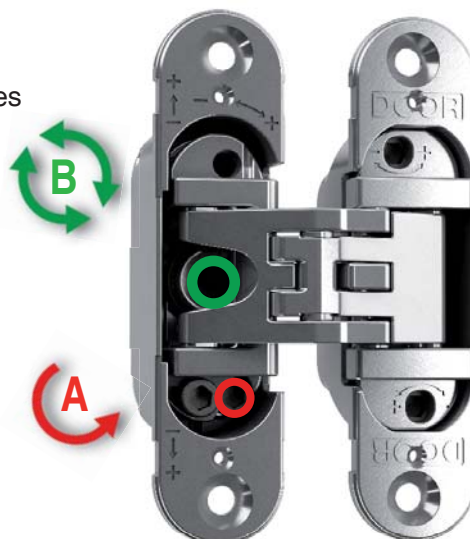


### HORIZONTAL ADJUSTMENT



Rotate screws **C**

Note: do the same rotation with both screws

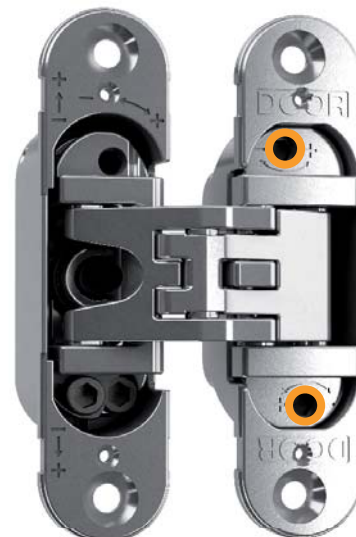

### DEPTH ADJUSTMENT



Untighten the blocking screw **D** in all the hinges on the door leaf



Rotate the eccentric **E**



Tighten the blocking screw **D** in all the hinges (max 4 Nm)

