ADJUSTMENT SHEET KUBICA K6400



VERTICAL ADJUSTMENT

Untighten the blocking screw **A** in all the hinges on the door leaf

Rotate the eccentric B


Tighten the blocking screw A in all the hinges (max 4 Nm)



HORIZONTAL ADJUSTMENT

Rotate screws C

Note: do the same rotation with both screws

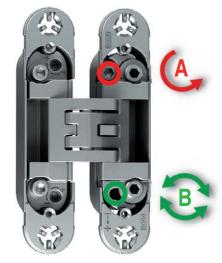





DEPTH ADJUSTMENT

Untighten the blocking screw ${\rm D}$ in all the hinges on the door leaf

Rotate the eccentric E

Tighten the blocking screw **D** in all the hinges (max 4 Nm)



